

Thermostat (TP760)

- Instructions




Handling


The HRV Cool Plus™ digital thermostat has a slim, modern design with simple functionality. It has Easy-to-read, energy-efficient LED-based display that turns off when the screen is not in use. The simple controls are via backlight captive touch buttons.

Installation


Positioning

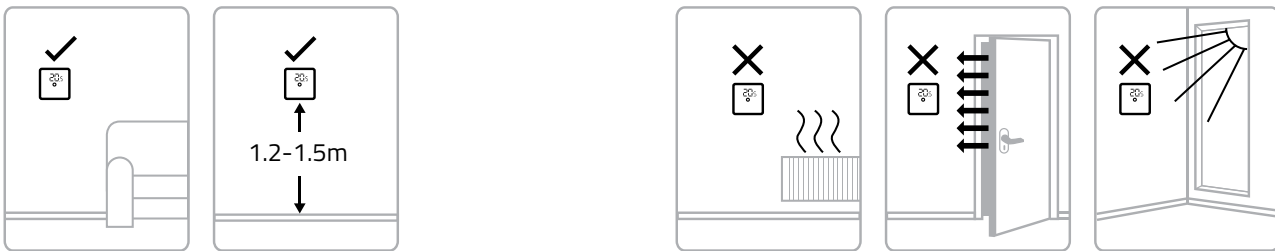


Mounting

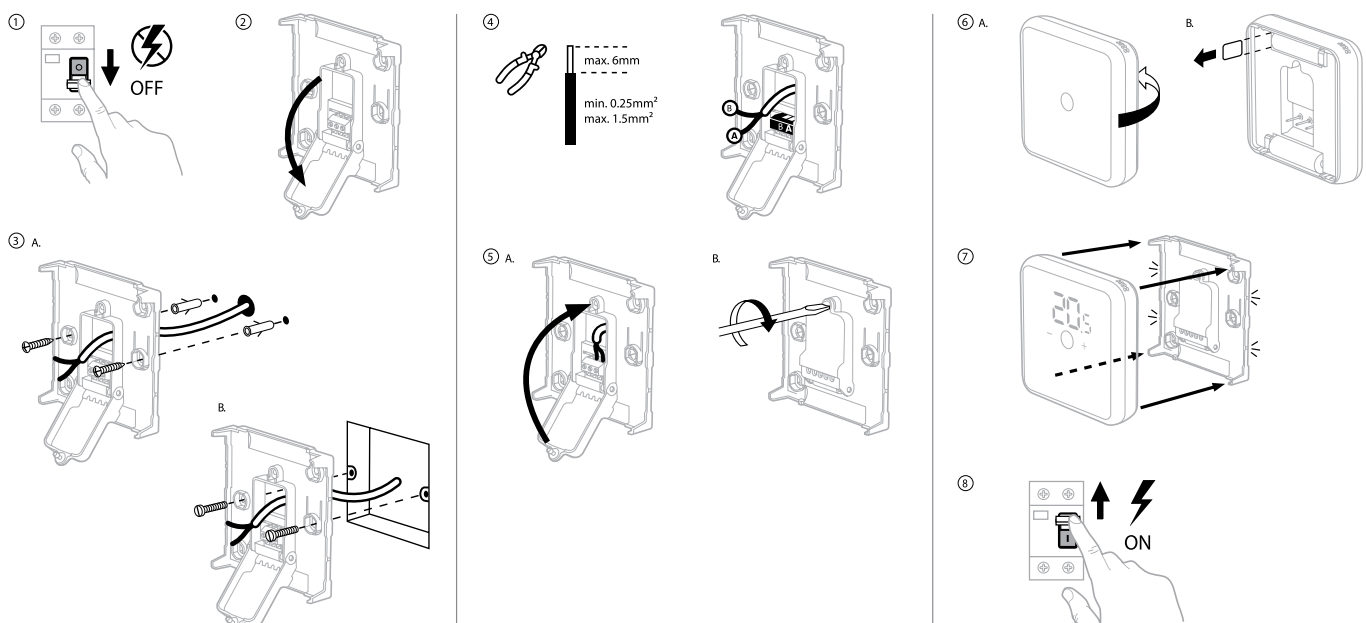

Wiring

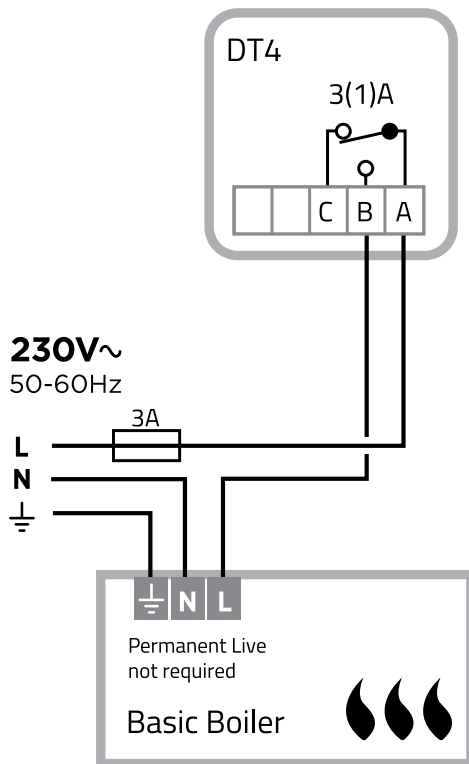


Operation

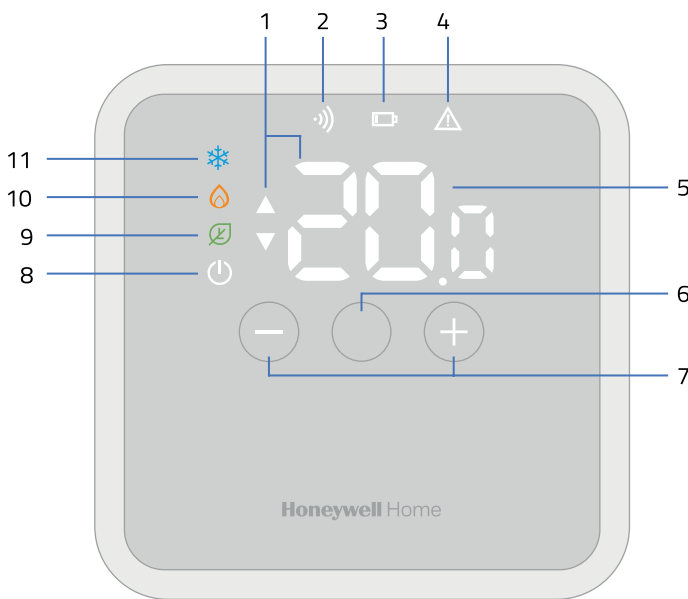


- | | | | |
|---|-----------------------------|----|-------------------------------|
| 1 | Set Temperature Adjust | 7 | Adjust Temperature / Settings |
| 2 | Wireless signal (DT4R only) | 8 | OFF Mode |
| 3 | Low battery | 9 | ECO Mode |
| 4 | Alert | 10 | Heating Demand |
| 5 | Room Temperature | 11 | Cooling Demand |
| 6 | Wake Up / Select | | |


Change to Cooling mode

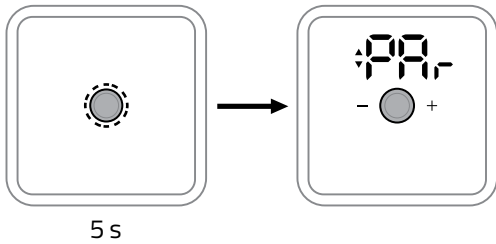


1. Press and hold main button for 5 secs to get into the setup screen.

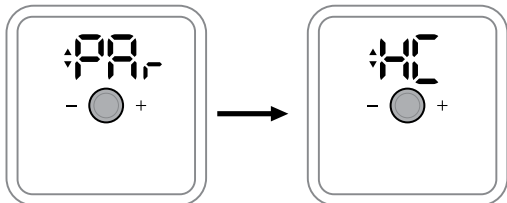


2. Press again to get into the heating/cooling options

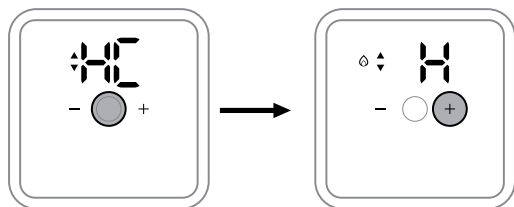


3. Press again to adjust the settings.

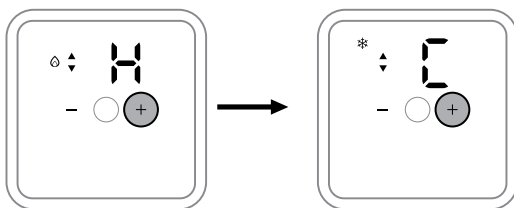

4. Use the + button to select Cooling

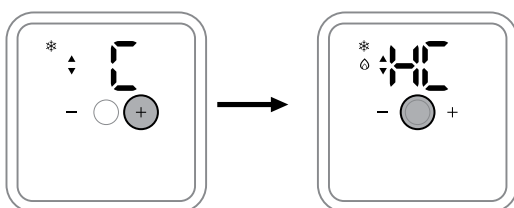


5. Press main button to confirm the setting

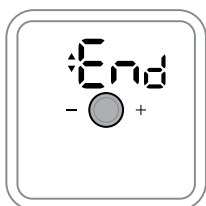

6. Keep pressing the + button to get to the End and then the main button to confirm exit.


Increase minimum On and Off time to 5mins (Default 1min)

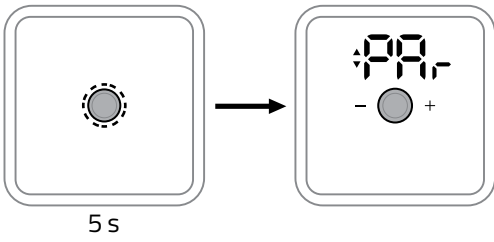


1. Press and hold main button for 5 secs to get into the setup screen.




2. Press again to get options screen.

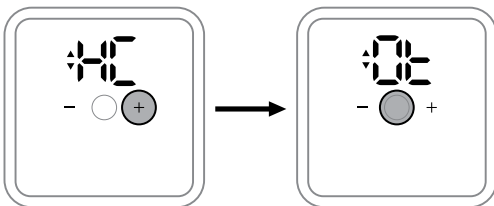


3. Use the + button to select Minimum On Time and the main button to adjust.

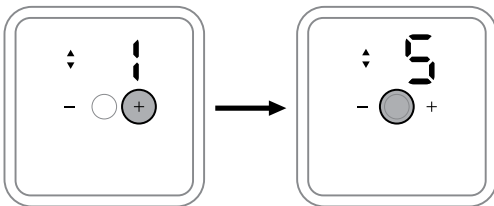

4. Use the + button to increase the time from 1 to 5mins and the main button to confirm the setting.

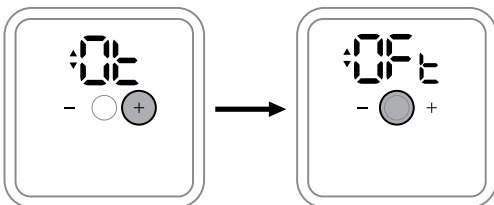

5. Use the + button to select Minimum Off Time and the main button to adjust.

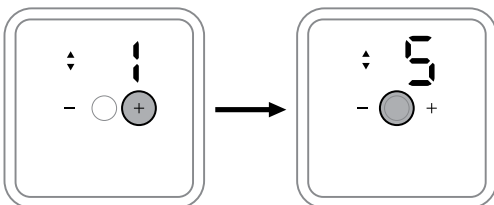

6. Use the + button to increase the time from 1 to 5mins and the main button to confirm the setting.



7. Keep pressing the + button to get to the End and then the main button to confirm exit.

Current room temperature and set point adjustment



1. Single press of main button shows current room temperature..



2. Single press then the +/- buttons adjusts the set point temperature



3. Double press and you can change from On/Eco/Off using +/- buttons

Battery Replace

